

Lucent Technologies
Bell Labs Innovations



DEFINITY[®] Enterprise Communications Server (ECS)

CALLMASTER[®] IV Voice Terminal User and Installation Instructions

555-015-171
Comcode 108229717
Issue 2
February 1998

Copyright© 1998, Lucent Technologies
All Rights Reserved
Printed in U.S.A.

Notice

Every effort was made to ensure that the information in this book was complete and accurate at the time of printing. However, information is subject to change.

Your Responsibility for Your System's Security

Toll fraud is the unauthorized use of your telecommunications system by an unauthorized party, for example, persons other than your company's employees, agents, subcontractors, or persons working on your company's behalf. Note that there may be a risk of toll fraud associated with your telecommunications system and, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

You and your system manager are responsible for the security of your system, such as programming and configuring your equipment to prevent unauthorized use. The system manager is also responsible for reading all installation, instruction, and system administration documents provided with this product in order to fully understand the features that can introduce risk of toll fraud and the steps that can be taken to reduce that risk. Lucent Technologies does not warrant that this product is immune from or will prevent unauthorized use of common-carrier telecommunication services or facilities accessed through or connected to it. Lucent Technologies will not be responsible for any charges that result from such unauthorized use.

Lucent Technologies Fraud Intervention

If you *suspect that you are being victimized* by toll fraud and you need technical support or assistance, call Technical Service Center Toll Fraud Intervention Hotline at 1 800 643-2353.

Interference Warning Information

WARNING: The CALLMASTER® IV voice terminal has been tested and found to comply with the limits for a **Class B** digital device, pursuant to Part 15 of the FCC Rules and CISPR-22. These limits are designed to provide reasonable protection against harmful interference in an installation. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and television communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving television or radio antenna where this may be done safely.

- Increase the separation between the telephone equipment.
- Plug the telephone into a different ac outlet than the receiver so that the telephone equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/tv technician for help.

Trademarks

DEFINITY and CALLMASTER are registered trademarks of Lucent Technologies.

SoundPoint is a trademark of Polycom, Inc.

Ordering Information

Call: Lucent Technologies BCS Publications Center
Voice 1 800 457-1235 International Voice 317 322-6791
Fax 1 800 457-1764 International Fax 317 322-6699

Write: Lucent Technologies BCS Publications Center
2855 N. Franklin Road
Indianapolis, IN 46219

Order: Document No. 555-015-171
Comcode 108229717
Issue 2, February 1998

European Union Declaration of Conformity

Lucent Technologies Business Communications Systems declares that the equipment specified in this document conforms to the referenced European Union (EU) Directives and Harmonized Standards listed below:

EMC Directive 89/336/EEC

Low-Voltage Directive 73/23/EEC



The "CE" mark affixed to the equipment means that it conforms to the above directives.

Acknowledgment

This document was prepared by Product Publication, Lucent Technologies, Middletown, NJ



IMPORTANT USER SAFETY INSTRUCTIONS

The most careful attention has been devoted to quality standards in the manufacture of your new voice terminal. Safety is a major factor in the design of every set. But, safety is YOUR responsibility too.

Please read carefully the helpful tips listed below and on the next page. These suggestions will enable you to take full advantage of your new voice terminal. Retain these tips for later use.

Use

When using your telephone equipment, the following safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read and understand all instructions.
- Follow all warnings and instructions marked on the telephone.
- This telephone can be hazardous if immersed in water. To avoid the possibility of electric shock, do not use it while you are wet. If you accidentally drop the telephone into water, do not retrieve it until you have first unplugged the line cord from the modular wall jack. Then, call service personnel to ask about a replacement.
- Avoid using the telephone during electrical storms in your immediate area. There is a risk of electric shock from lightning. Urgent calls should be brief. Even though protective measures may have been installed to limit electrical surges from entering your business, absolute protection from lightning is impossible.
- If you suspect a natural gas leak, report it immediately, but use a telephone away from the area in question. The telephone's electrical contacts could generate a tiny spark. While unlikely, it is possible that this spark could ignite heavy concentrations of gas.
- Never push objects of any kind into the equipment through housing slots since they may touch hazardous voltage points or short out parts that could result in a risk of electric shock. Never spill liquid of any kind on the telephone. If liquid is spilled, however, refer servicing to proper service personnel.
- To reduce the risk of electric shock, do not disassemble this telephone. There are no user serviceable parts. Opening or removing covers may expose you to hazardous voltages. Incorrect reassembly can cause electric shock when the telephone is subsequently used.

Service

- Before cleaning, unplug the telephone from the modular wall jack. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Unplug the telephone from the modular wall jack. Be sure to refer servicing to qualified service personnel when these conditions exist:
 - If liquid has been spilled into the telephone
 - If the telephone has been exposed to rain or water
 - If the telephone has been dropped or the housing has been damaged
 - If you note a distinct change in the performance of the telephone

SAVE THESE INSTRUCTIONS



When you see this warning symbol on the product, refer to this instructions booklet packed with the product for more information before proceeding.

ADDITIONAL INSTALLATION WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN CAUSE DAMAGE TO THE TERMINAL OR CAUSE THE ASSOCIATED PBX CIRCUIT PACK TO REMOVE POWER TO THE TERMINAL. IN EITHER CASE THE TERMINAL WILL NOT FUNCTION CORRECTLY.

The design of this product allows it to operate on either 2-wire or 4-wire DCP circuits. In order for the terminal to function properly in either 2-wire or 4-wire installations, there must be NO INTERCONNECTIONS between the wire pairs used for 2-wire and 4-wire operation. Bridging or paralleling of these pairs can result in damage to the terminal or can cause the PBX circuit pack to remove power to the terminal.

REMOVE ALL CONNECTIONS BETWEEN PAIRS BEFORE CONNECTING THE TERMINAL.

For 2-wire operation, if you need to plug the voice terminal into a 4-pin or 6-pin wall jack, instead of a standard 8-pin modular jack, refer to the “Modular Wall Jack Wiring” table on the next page to insure that the wires from the 4-pin or 6-pin wall jack are connected to the correct pins on the terminal 2-wire “LINE” jack.

4-WIRE installations MUST ONLY have PBX connections on pair 2 and pair 3 and, if necessary, auxiliary power must be connected to pair 4.

2-WIRE installations MUST ONLY have PBX connections on pair 1 and, if necessary, auxiliary power must be connected to pair 4.

WHEN THIS PRODUCT IS LOCATED IN A SEPARATE BUILDING from the telephone communications system, a line current protector MUST be installed at the entry/exit points of ALL buildings through which the line passes. However, note that there is a difference between 4-wire and 2-wire installations.

The following are the ONLY acceptable devices for use in a 4-wire installation: (Note that two protectors are needed at each installation point.)

- Lucent Technologies 4-type protectors
- ITW LINX LP-type protectors

For 2-wire installations, the following is recommended: (Only one protector is needed at each installation point.)


- Lucent Technologies 4-type protectors
- ITW LINX LP-type protectors

However, if the above two protectors are not used, the following is acceptable in a 2-wire installation:

- Lucent Technologies 3BIC (Carbon block) or Lucent 3BEW (gas tube) protectors

NOTE: The 3BIC and 3BEW protectors can be used ONLY for 2-wire installations. They CANNOT be used for 4-wire installations.

Wiring Information

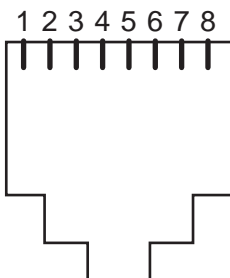

A Voice Terminal Line Jack

MODULAR WALL JACK WIRING			
PIN	PAIR	COLOR	DESCRIPTION
1	2	W-O	4-Wire Output 2-Wire (Rec Output)
2	2	O-W	4-Wire Output 2-Wire (Rec Output)
3	3	W-G	4-Wire Input 2-Wire (Not Used)
4	1	W-BL	2-Wire (Tip) 4-Wire (Rec Output)
5	1	BL-W	2-Wire (Ring) 4-Wire (Rec Output)
6	3	G-W	4-Wire Input 2-Wire (Not Used)
7	4	W-BR	Adjunct Power -48 vdc
8	4	BR-W	Adjunct Power Common

For more information about wiring, see the section on “DCP Line Interface” in the next portion of this booklet.

Contents

Your CALLMASTER IV Voice Terminal	1
The Headset (or the Handset)	1
The Recorder Interface	2
Organization of This Guide	2
Conventions	3
Feature Descriptions	4
Installation	8
Checklist of Parts	8
Orderable Equipment	9
Installation Procedures	10
Operating Range Requirements	11
The 2-Wire/4-Wire Line Adapter	12
DCP Line Interface	12
Testing the Headset or Handset	17
Labeling and Installing the Button-Designation Cards and Covers	17
Basic Voice Terminal Operations	18
Going Off-Hook	18
Raising or Lowering Receive Volume	19
Disconnecting from Calls	19
Feature Procedures	20
Conference	20
Drop	21
Hold	22
Mute	22
Select Ring (and Ringer Volume)	23
Self-Test	24
Transfer	25

Technical Description	26
Physical Dimensions and Weight	26
Power Requirements	26
Environmental Requirements	26

Your CALLMASTER IV Voice Terminal

The CALLMASTER® IV voice terminal referred to in this manual has been specially designed for use with the Automatic Call Distribution (ACD) system and the many features of the DEFINITY® Enterprise Communications Server (ECS) and the DEFINITY® Communications System Generic 1, Generic 2, and Generic 3.

This voice terminal has six buttons that can be used for either call appearances or features and 15 buttons that are administered exclusively for features. It also has a 2-line by 40-character liquid crystal display for showing call-related information, and designated buttons for both the ACD Log In and Release features.

In addition, the CALLMASTER IV has a built-in Recorder Interface which allows you to connect the voice terminal to a recording device so that you can record all voice interactions.

NOTE: The tape recorder used with the CALLMASTER IV voice terminal must be purchased by the user; it is *not* provided with the voice terminal.

For more information on using ACD features, see the *DEFINITY Enterprise Communications Server (ECS) ACD Agent Instructions*, 555-204-722; the *DEFINITY Generic 2 and System 85 ACD Agent Instructions*, 555-104-713; the *DEFINITY Enterprise Communications Server (ECS) ACD Supervisor Instructions*, 555-230-724; and the *DEFINITY Generic 2 and System 85 ACD Supervisor Instructions*, 555-104-714.

The Headset (or the Handset)

Since the CALLMASTER IV voice terminal is most often used with a headset, each set has two headset jacks, one on each side of the housing, so that one or two headsets can easily be connected. The voice terminal is immediately off-hook when the headset is plugged into the voice terminal.

With the use of an optional handset D-Kit, a K2G2 handset can be added to the voice terminal. (See "Orderable Equipment" in the Installation section of these instructions for Comcodes of the handset D-Kits and individual parts.) This kit includes a handset and handset cord, a PJ327 adapter so that the handset cord can be connected to one of the headset jacks, and a cradle in which the handset can be kept when it is not in use. (This cradle *cannot* be used as a switchhook.)

NOTE: Equipment used with previous versions of the CALLMASTER voice terminal may not be compatible with the CALLMASTER IV.

NOTE: If you have both a handset and a headset plugged into a CALLMASTER IV voice terminal, you may want to unplug the handset when you are not using it, since it can pick up nearby noises (such as papers being shuffled) which may be heard over the headset.

The Recorder Interface

The CALLMASTER IV's Recorder Interface is designed for recording calls on a standard tape recorder. (A recorder with AGC [Automatic Gain Control] is recommended.) With this interface, a warning tone, a soft beep repeated every 15 seconds, notifies the agent and the calling party that the call is being recorded. *Be aware that this tone may be a legal requirement.*

IMPORTANT: The use of service observing features and call recording features may be subject to federal, state, and local laws, rules, or regulations and may be prohibited pursuant to the laws, rules, or regulations or require the consent of one or both of the parties to the conversation. Customers should familiarize themselves with and comply with all applicable laws, rules, and regulations before using these features.

Organization of This Guide

This user guide is divided into four main sections:

Feature Descriptions — Use the drawing to locate the features on your CALLMASTER IV voice terminal; use the feature descriptions and explanations to help you remember how these features are used.

Installation — Use the procedures listed in this section to install your CALLMASTER IV voice terminal.



Basic Voice Terminal Operations — Use the procedures here to go off-hook, raise or lower the receive volume, and disconnect from calls.

Feature Procedures — Follow the procedures listed here to use the fixed features on your voice terminal, those features you can use immediately.

Technical Description — This short section contains the dimensions, power requirements, and environmental requirements for the CALLMASTER IV voice terminal.

Conventions

The following conventions are used in the procedures:

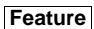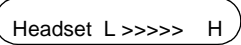	Each of these boxes represents a button to which a feature has been assigned. The button is labeled with a feature name.
	Each of these long rectangular boxes represents a feature message shown on the 2-line by 40-character display screen.

Feature Descriptions

Familiarize yourself with your CALLMASTER IV voice terminal and its many features by reviewing Figure 1 below and the feature explanations on the following pages

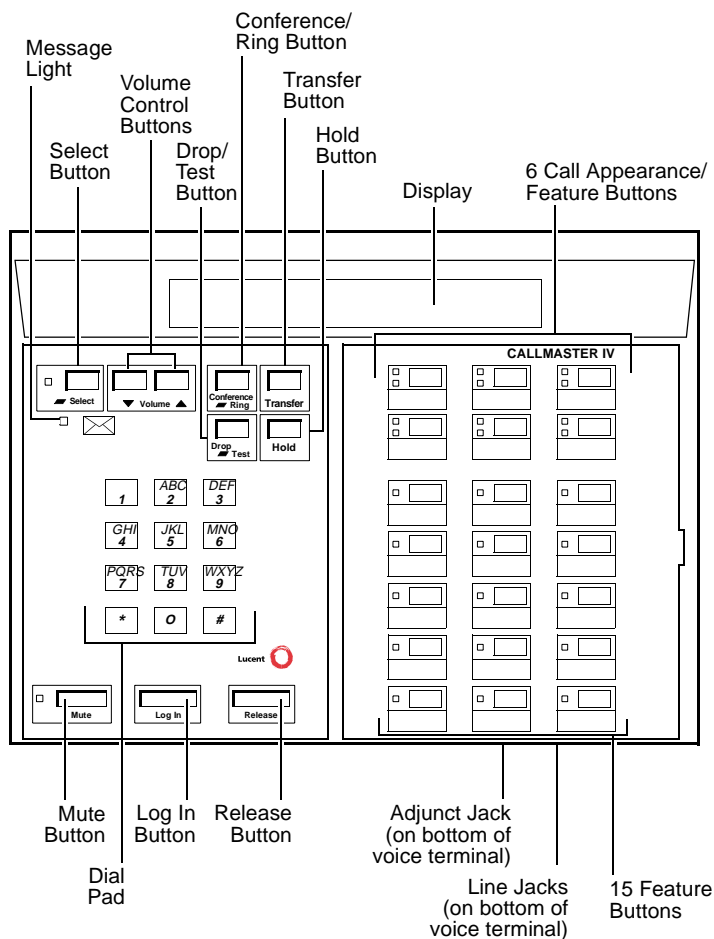
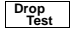



FIGURE 1 The CALLMASTER IV Voice Terminal


Starting at the top left of Figure 1 and continuing clockwise:


Message Light — A red light which goes on steadily when a message has been left for you.

Select Button — Can be used in two different ways:

- Used with  to initiate a self-test of your voice terminal;
- Used with  to select your own personalized ring from among eight available patterns.

Volume Control Buttons — For adjusting the volume of the headset (or handset). These buttons adjust the volume of the tone ringer if the headset (or handset) is unplugged or the CALLMASTER IV is ringing.

Drop/Test Button — For disconnecting from a call or dropping the last party added to a conference call. When used with , you can perform a self-test of your voice terminal lights and tone ringer.

Conference/Ring Button — For setting up conference calls. With a DEFINITY ECS or a DEFINITY Generic 1 or Generic 3, the conference can include up to six parties. DEFINITY Generic 2 users can conference up to three parties. (To add more parties, DEFINITY Generic 2 users should see their system manager.) When used with , you can select a personalized ringing pattern for your voice terminal.

Transfer Button — For transferring a call to another voice terminal.


Hold Button — A red button for putting calls on hold.

Display — A built-in LCD 2-line by 40-character display.

6 Call Appearance/Feature Buttons — These six buttons are devoted to handling incoming and outgoing calls (call appearances) and are labeled with an extension number. Each button has a red appearance light beside it to tell you that this is the line you are using or that this is the line you will get when you answer a call. The green status light next to each call appearance and feature button tells you the line or feature is being used.

15 Feature Buttons — Each of these 15 buttons accesses a feature and is labeled with a feature name. Each button has a green light beside it. When the green light goes on, the feature is active.

Line Jacks (on bottom of voice terminal) — The two Line jacks are used for connecting a line cord to your voice terminal. These jacks are labeled “4 WIRE LINE 2 WIRE.”

Adjunct Jack (on bottom of voice terminal) — This jack is used to connect compatible adjunct equipment, such as an S101A, S201A, or SoundPoint™ Office Speakerphone, a 507A Adapter, or a 500A1 Headset Adapter, to your voice terminal. The jack is labeled .

Release Button —Used in ACD operation to end a call. However, pressing **Release** is equivalent to hanging up; you will not receive dial tone.

Log in Button — Use this button to automatically log in to the ACD system when you want to begin answering ACD calls.

Dial Pad — The standard 12-button pad for dialing phone numbers and accessing features. The letters, “Q” and “Z,” have been added to the appropriate dial pad keys for directory access, and the “5” button on your dial pad has raised bars for visually-impaired users.

Mute Button — For turning off the voice transmitter in the headset or handset so the other person cannot hear you.

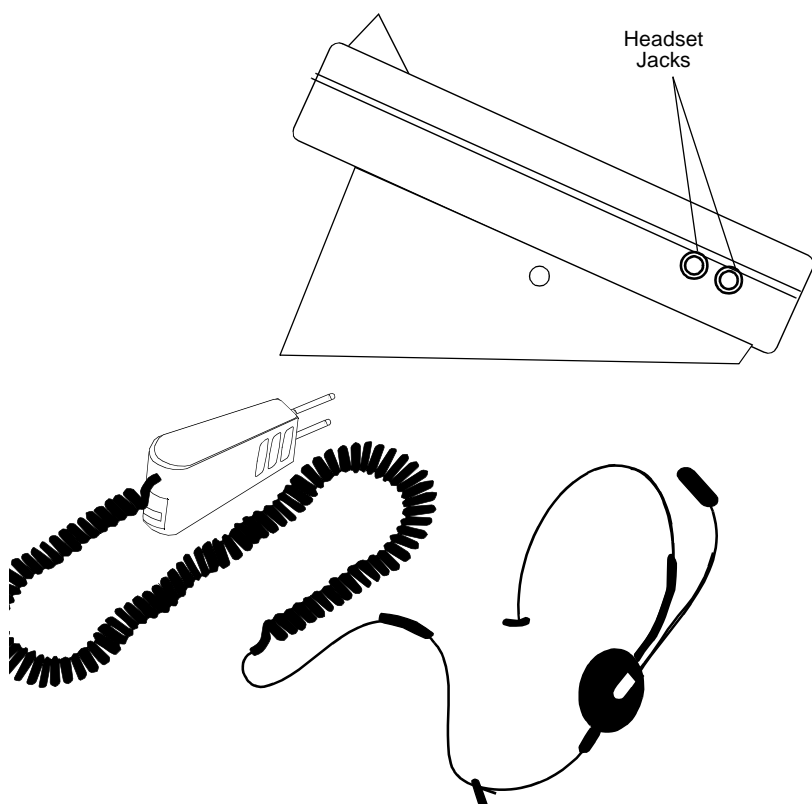


FIGURE 2 The Headset/Handset Jacks on the Side of the CALLMASTER IV

On both *sides* of the CALLMASTER IV voice terminal, there is a set of headset/handset jacks, as shown in Figure 2 above. Use these jacks for connecting a headset and/or a handset to your CALLMASTER set.

NOTE: Two headsets plugged into the sides of the CALLMASTER can be used simultaneously.

If any adjunct is active, the left and right headset jacks on the voice terminal are deactivated.

Installation

NOTE: The CALLMASTER IV voice terminal can *only* be desk-mounted; it *cannot* be wall-mounted.

IMPORTANT: *DEFINITY ECS CALLMASTER II, CALLMASTER III, and CALLMASTER IV Voice Terminals Instructions for Programming the Options*, 555-015-172, is a brief set of instructions which includes procedures for setting the display for 1 or 2 lines and for controlling the Mute button. Within this booklet, there are also procedures for enabling or disabling the Recorder Interface and the Recording Warning Tones and for setting the headset and handset volume. It is important that **ONLY** a service technician or the system manager program these options. This document is orderable from the Publications Center listed at the front of this book.

Checklist of Parts

The CALLMASTER IV voice terminal package includes the following items:

- A CALLMASTER IV voice terminal with recorder interface
- Line cord (7-foot/2.1336 meters, 8-wire D8W87 modular cord)
- Button designation cards and plastic covers
- This manual that you are presently reading

NOTE: Included in the box with international CALLMASTER voice terminals is a manual which has pertinent procedural information written in 7 different languages. This manual is titled *The DEFINITY ECS CALLMASTER II, CALLMASTER III, and CALLMASTER IV International Voice Terminals Quick Reference*. Its Document Ordering number is 555-015-717.

Orderable Equipment

The following equipment can be ordered by using the appropriate Comcode or Price Element Code (PEC):

Orderable Equipment		
ITEM	COMCODE	PEC
CALLMASTER IV Voice Terminal (with Recorder Interface)	Black=108010554 Misty Cream= 108010570 White=108010562	3179-10B 3179-10M 3179-10W
Line Cord (7-foot/2.1336 meters, 8-wire D8W87 modular cord) Line Cord (14-foot/4.2672 meters D8W modular cord)	103786786 103786802	31793-03
Plug Prong base unit		3122-010-(A)
Handset D-Kit #182083 (black) Handset cradle* Thumbscrew* Handset K2G2* Handset cord H4DU* PJ327 Adapter*	105514798 847731114 845952928 407228600 407632819 406978395	31793-22
Handset D-Kit #182084 (misty cream) Handset cradle* Thumbscrew* Handset K2G2* Handset cord H4DU* PJ327 Adapter*	105514806 847960226 845952936 407228675 407632827 405730946	31793-03
Handset D-Kit #182835 (white) Handset cradle* Thumbscrew* Handset K2G2* Handset cord H4DU* PJ327 Adapter*	107318438 847731106 847278611 407228667 407632835 407128354	31793-04
Designation cards (set of 25) — U.S. English/ Lucent Technologies	847933850	31795-CTR15
Designation cards (set of 25) — U.S. English/ Southwestern Bell	848055737	31795-SWL01
Designation cards (set of 25) — Italian	847945565	31795-CTR02
Designation cards (set of 25) — Japanese	847933868	31795-CTR05
Designation cards (set of 25) — Canadian French	847933884	31795-CTR07
Designation cards (set of 25) — Dutch	847933892	31795-CTR11
Designation cards (set of 25) — Castilian Spanish/Latin American Spanish	847933900	31795-CTR16 or -CTR90

* This piece of equipment comes with the Handset D-Kit, but it can also be ordered separately with the Comcode in the second column.

Orderable Equipment (continued)		
ITEM	COMCODE	PEC
Designation cards (set of 25) — German	847933400	31795-CTR92
Designation cards (set of 25) — Parisian French/ Belgian French	847933934	31795-CTR91 or -CTR39
Designation cards (set of 25) — Brazilian Portuguese	847933959	31795-CTR43

Installation Procedures

Use the following procedures to install your CALLMASTER IV voice terminal.

See Figure 3 for the location of the jacks mentioned below.

- 1 Lay the voice terminal face down so the bottom slopes toward you.
- 2 Plug the line cord into the 4-wire LINE jack for 4-wire operation; for 2-wire operation, plug the line cord into the 2-wire LINE jack. Press firmly until you hear the line cord click.
NOTE: If you plug the line cord into the wrong LINE jack, be advised that the voice terminal will not work or it may be damaged.
- 3 Press the line cord into the line cord routing channel, placing the cord under the tab, and gently pull any slack from the cord to the rear of the voice terminal.
- 4 Turn the voice terminal rightside up so that the display is facing you.
- 5 Plug the line cord into the modular wall jack. (Since the line cord is 7-feet/ 2.1336 meters long, your CALLMASTER voice terminal must be within this distance from the wall jack.)

NOTE: You may also use a 14-foot/4.2672 meters line cord. To order this cord, see "Orderable Equipment" earlier in these instructions.

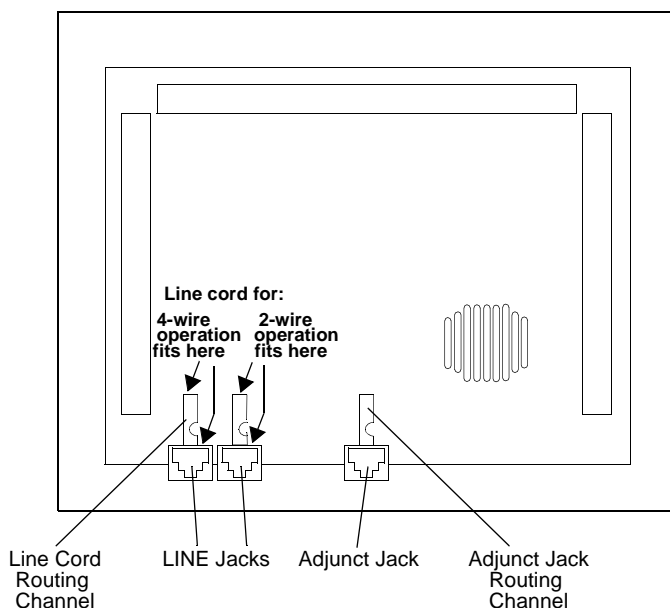


FIGURE 3 The LINE Jack, Adjunct Jack, and Routing Channels

Operating Range Requirements

- The total distance between the CALLMASTER IV voice terminal with recorder interface active and the recording device should not exceed 200 feet/60.96 meters.
- The distance between the CALLMASTER IV voice terminal and the PBX must NOT exceed the following:
 - **In 4-wire mode**, with 22-gauge or 24-gauge wire, the distance between the CALLMASTER IV and the PBX should not exceed 5,000 feet/1,524 meters; with 26-gauge wire, the distance should not exceed 4,000 feet/1,219.2 meters.
 - **In 2-wire mode**, with 22-gauge wire, the distance between the CALLMASTER IV and the PBX should not exceed 5,500 feet/1,676.4 meters; with 24-gauge wire, the distance should not exceed 3,500 feet/1,066.8 meters; with 26-gauge wire, the distance should not exceed 2,200 feet/670.56 meters.
- The record output impedance is approximately 600 ohms and the output channel is isolated from the voice terminal with an FCC Part 68-approved voice transformer.

The 2-Wire/4-Wire Line Adapter

The 2-wire/4-wire line adapter (PEC: 32302; Comcode: 407124114 for a single adapter; PEC: 32303 for a package of 25 adapters) is available to accommodate situations in which customers need to upgrade from an analog-type RJ11C jack to an 8-wire RJ45X-type jack. This adapter eliminates the need to remove RJ11C jacks which are presently being used and install new RJ45X jacks in their place.

Please read the **CAUTION** statement directly below before beginning the installation. If all connections are correct, plug the adapter into the RJ11C jack to provide the proper wiring translation to the DCP terminals.

NOTE: This adapter works **ONLY** when using a DCP terminal on a 2-wire DCP digital line circuit card (for example, the TN2181 or TN2224). It will **NOT** work if you are connecting a DCP terminal to a 4-wire, 4-port, or 4-wire, 8-port DCP line circuit card (such as the TN754B, TN754, TN413, SN270B, or SN270).

CAUTION: In a previous installation of the premises line jacks, customers may have wired the jack connections as bridged or in parallel. These jacks must be rewired, at customer expense, in order for DCP terminals to function properly in either 2-wire or 4-wire installations. There must be **NO INTERCONNECTIONS** between the wire pairs used for 2-wire and 4-wire operations. Bridging or paralleling of these pairs can result in damage to the terminal or can cause the PBX line circuit card to remove power to the terminal. All interconnections between these pairs **MUST BE REMOVED BEFORE** the DCP terminals are connected to the jack.

DCP Line Interface

The DCP line interface is a standard D8W 8-wire modular cord. The 8 line-jack pins are numbered in increasing order from left to right when facing the jack with the tab slot down. The table on the next page shows pin assignments for the line cord and jack block interface

The DCP Line Interface				
CONNECTOR BLOCK		DCP JACK INTERFACE		
Conn. Block Pin Number	D Inside Wire Color	Pin	Name	Signal Description
3	W-O	1	OD1	Balance output from telephone (power –48V) 4-wire application
			REC-1	Output to Recorder 2-wire application
4	O-W	2	OD2	Balance output from telephone (power –48V) 4-wire application
			REC-2	Output to Recorder 2-wire application
5	W-G	3	ID1	Balance input from PBX (power –48V) 4-wire application
				2-wire — unused
1	W-BL	4	REC-1	Output to Recorder 4-wire application
			U-T*	Balanced output from telephone (power –48V) 2-wire application
2	BL-W	5	REC-2	Output to Recorder 4-wire application
			U-R*	Balanced output from PBX (power 0v) 2-wire application
6	G-W	6	ID2	Balanced input from PBX (power 0v) 4-wire application
				2-wire — unused
7	W-BR	7	P1–	Adjunct power –48V (to Adjunct jack)
8	BR-W	8	P2+	Adjunct power common (to Adjunct jack)

* U-T = “Tip”

U-R = “Ring”

Figure 4 shows how a CALLMASTER IV, in a 4-wire application with Recorder Interface, should be configured through the wall jack with the DEFINITY PBX, an adjunct power source, and the recording device.

Figure 5 shows the same connections when a CALLMASTER IV is in a 2-wire application.

NOTE: Typically, an RJ45X or equivalent wall jack is used in this type of configuration.

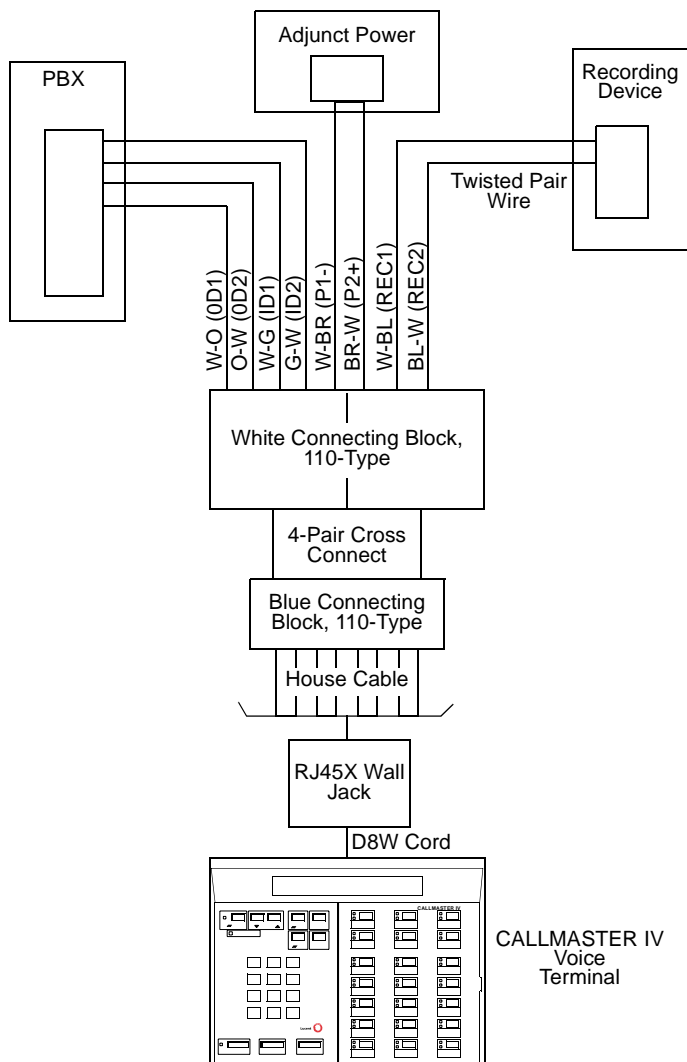


FIGURE 4 Connecting the 4-Wire CALLMASTER IV with Recorder Interface to the PBX, Adjunct Power Source, and the Recording Device

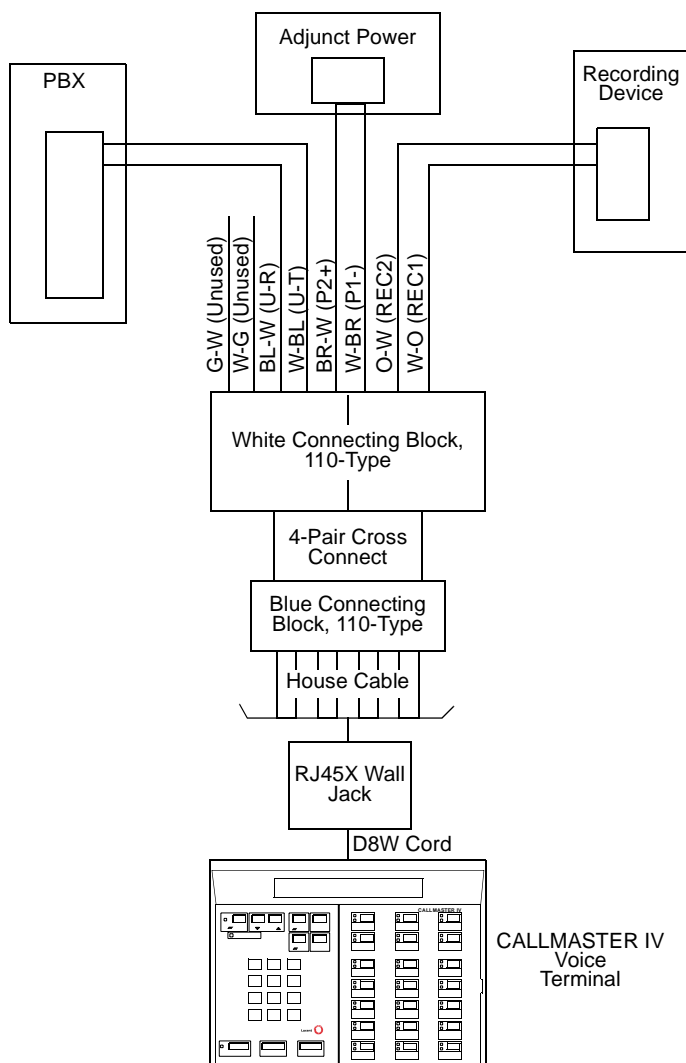


FIGURE 5 Connecting the 2-Wire CALLMASTER IV with Recorder Interface to the PBX, Adjunct Power Source, and the Recording Device

Testing the Headset or Handset

NOTE: If you are using a handset, use the installation instructions that come with the handset kit to install the handset cradle.

- 1 Plug in the headset or the handset, press a call appearance button, and listen for dial tone.
 - If you do not hear dial tone, press another call appearance button. You may also want to check that the cords are connected securely at both ends.

Labeling and Installing the Button-Designation Cards and Covers

NOTE: The cards and covers are shipped as loose items with the CALLMASTER IV voice terminal.

- 1 Make sure that the voice terminal is right side up.
- 2 Type or write the numbers/features on the button designation cards with the appropriate button information. See Figure 6.
- 3 Crease the perforated edges of the button designation cards and then remove the cards.
- 4 If the clear plastic card cover has already been installed on the voice terminal, remove the cover on the right side of the CALLMASTER IV by gently lifting the plastic cover, with your fingernail, at the slot on the right of the set (for the card on the right).

If the plastic card cover has not been previously installed on your CALLMASTER IV, go on to the next step.

NOTE: If you need to remove the clear card cover on the left side of the set, gently lift the plastic cover, with your fingernail, at the slot on the left of the set.

- 5 Place the designation card that you have filled out over the buttons, and then replace the clear cover by gently bending the cover so that the tabs at the top and bottom end of the cover can be inserted into the corresponding slots on the housing of the voice terminal. See Figure 6.

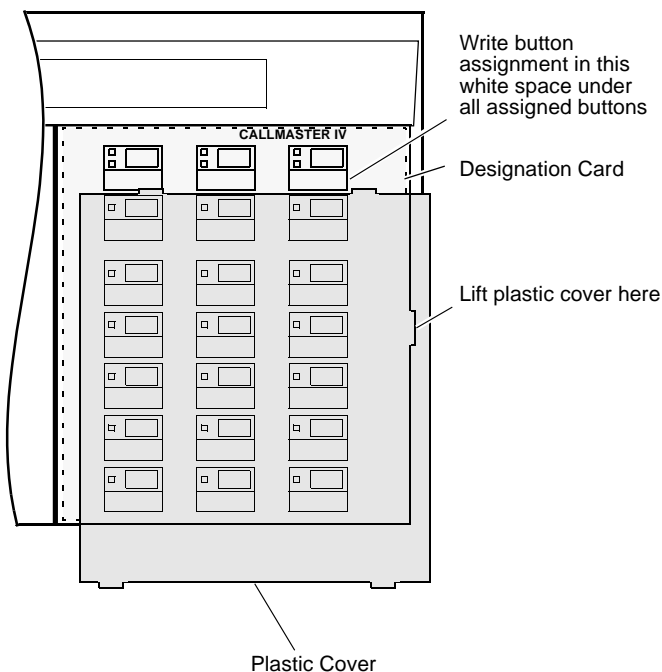


FIGURE 6 Inserting the Designation Cards

Basic Voice Terminal Operations

The following operations can be used immediately.

Going Off-Hook

NOTE: When the headset or handset is plugged into the terminal, it is immediately off-hook.

Raising or Lowering Receive Volume

You can use the Volume control button to raise and lower the receive level volume under the following conditions:

- The CALLMASTER IV voice terminal is off-hook, and the headset(s) is plugged in.
- The voice terminal is *not* off-hook on an external speakerphone call.
- No call is ringing.
- You are *not* in the midst of selecting a personalized ringing pattern.

To raise or lower the receive volume

- To raise the volume of the receive level of the headset or the handset, press the right volume control button labeled ▲.
- To lower the receive level of the headset or the handset, press the left volume control button labeled ▼.

NOTE: There are eight possible volume settings. Each press of the volume control button raises or lowers the volume one incremental level.

As you raise or lower the headset volume level, the display reflects your choice, such as:

A rounded rectangular display showing the text "Headset L >>>> H". The text is centered and uses a monospaced font. The display is enclosed in a thin black border.

On the display, one arrow is the lowest setting, and eight arrows is the highest setting.

NOTE: For procedures to raise and lower the ringer volume on your CALLMASTER IV set, see the procedures for the Select Ring feature later in this section.

Disconnecting from Calls

You can disconnect from a call in several ways:

- Press **Release** to disconnect from any type of call. This method is faster than waiting for a caller or trunk to disconnect and enables you to perform other ACD or voice terminal procedures sooner. You do not hear dial tone after you press **Release**.
- Press **Drop Test** which disconnects you from a call and gives you dial tone. Use **Drop Test** when you want to disconnect from an ACD or non-ACD call and place another call.



Feature Procedures

The procedures in this section give short, step-by-step instructions for using each of these features. For your convenience, the features are listed alphabetically.

CONFERENCE

To add another party to an existing call

NOTE: If your CALLMASTER IV voice terminal is connected to a DEFINITY ECS or a DEFINITY Generic 1 or Generic 3, the conference call can include up to six parties. If your CALLMASTER IV is connected to a DEFINITY Generic 2, the conference can include up to three parties. (For a conference call of more than three parties, contact your system manager.)

- 1 Press .
 - Present call is put on hold; all other parties remain connected to each other.
 - You are given a new call appearance and hear dial tone.
- 2 Dial the number of the new party and wait for an answer.
 - If the party answers, explain who is on the conference call and go on to Step 3.
 - If the party does not answer or if the line is busy, press the call appearance beside the fluttering light to return to the held call (skip the next step).
- 3 Press  again.
 - All parties on the call are now connected.
- 4 Repeat Steps 1 through 3 to add another party to the conference call.

To add a call you have put on hold to another call to which you are connected

- 1 Press .
 - Green light at the held call appearance continues to flutter.
 - Green light at the current call appearance also flutters.
 - You are given a new call appearance and hear dial tone.
 - 2 Press the call appearance button of the held call (first call).
 - 3 Press again.
 - All parties on the call are now connected.
-

DROP

To disconnect from an active 2-party call

- 1 Press .
 - You hear dial tone.

NOTE: You may press instead of to disconnect faster. However, if you press you will not hear dial tone.

To drop the last party you added to a conference call

- 1 Press .
 - The last party added to the conference call is dropped; you and the other parties remain connected.

HOLD

To put a call on hold while you answer another call, place a call, or perform some other task

- 1 Press **Hold** .
 - Green light next to the held call appearance flutters.

NOTE: If you put a conference call on hold, the other parties remain connected.

To answer a new call while active on another call

- 1 Press **Hold** .
 - Green light next to the held call appearance flutters.
- 2 Press the call appearance of the incoming call.

To return to the held call (dropping the new call)

- 1 Press the call appearance of the held call.

MUTE

To prevent the other party from hearing you

- 1 Press **Mute** .
 - Red light next to **Mute** goes on; the other person on the call cannot hear you.
- 2 When you want to resume the conversation with the other person on the call, press **Mute** again.
 - Red light next to button goes off; the other person can hear you again.

NOTE: The Mute feature has no effect when an adjunct is active. Use the Mute feature on the adjunct equipment.

SELECT RING (AND RINGER VOLUME)

To select a personalized ring

NOTE: There are eight different ringing patterns from which to choose.

- 1 Press **Select**.
 - Green light next to **Select** goes on steadily.
- 2 Press **Conference Ring**.
 - Green light next to **Select** winks.
 - Current ring pattern plays and repeats every three seconds.
 - Display shows the pattern you are currently hearing:

Personal Ring #x

("x" will be a number from 1 to 8.)



- 3 Continue to press **Conference Ring** to cycle through all eight ring patterns.
- 4 When you hear the desired ring pattern, press **Select** again.
 - Your new ring is set; the light next to **Select** goes off.

NOTE: If you receive a call, go off-hook, or lose power during selection, the process is interrupted and you must start again. If you lose power *after* you have selected your personalized ring, you will have to select your ringing pattern again.

You can raise or lower the volume of the tone ringer under the following conditions:

- The CALLMASTER IV is on-hook, and the headset is unplugged.
- The voice terminal is off-hook on the external speakerphone.
- A call is ringing at the voice terminal.
- You are in the process of selecting a personalized ringing pattern for your voice terminal.

To adjust the tone ringer volume if necessary




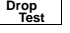
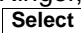
- 1 To raise the volume, press the right volume control button labeled ; to lower the volume, press the left volume control button labeled .
 - Display shows the volume level:

Ringer L >>>>> H

(There are eight possible volume settings. On the display, one arrow indicates the lowest setting has been selected. Eight arrows indicates the highest setting has been selected.)

SELF-TEST

To test the lights, the ringer, and the display on your voice terminal

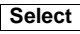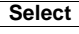- 1 While on-hook or off-hook, press .
 - Green light next to  goes on.
- 2 Press and hold down .
 - Three groups of lights go on in sequence.
 - Ringer sounds.
 - Display is activated.
- 3 Release  to end test.
 - Ringer, display, and lights return to pretest state; the light next to  goes off.

TRANSFER

To send an existing call to another extension or outside number

- 1 Press **Transfer**.
 - Green light next to the call appearance flutters.
 - Present call is put on hold.
 - You are given a new call appearance, and you hear dial tone.
- 2 Dial the number where the call will be transferred.
 - You hear ringback tone.
 - If the call is answered, remain on the line and announce the call if desired. Continue to Step 3.
 - If the call is not answered or if the line is busy, return to the held call by pressing the call appearance button where the green light is fluttering. Disregard Step 3.
- 3 Press **Transfer** again.
 - Call is transferred to the dialed number.

Technical Description

Physical Dimensions and Weight

NOTE: The CALLMASTER IV voice terminal can only be desk-mounted; it cannot be wall-mounted.

The CALLMASTER IV voice terminal measures:

- 8.5 inches/215.9 millimeters deep
- 11.0 inches/279.4 millimeters wide
- 4.25 lbs/1.853 kilograms

Power Requirements

The CALLMASTER IV voice terminal is line powered from the PBX switch. The CALLMASTER IV will operate in voltage ranges of 42.5 to 56.5 dc volts. See "Operating Range Requirements" in the **Installation** section.

NOTE: If adjunct equipment such as an S101A, S201A, or SoundPoint Office Speakerphone is connected to the CALLMASTER IV voice terminal's Adjunct jack, it must be auxiliary powered.

Environmental Requirements

The CALLMASTER IV voice terminal can operate in temperatures ranging from 40 to 120 degrees F (4 to 48 degrees C) and relative humidity ranging from 5 to 95 percent.



Lucent Technologies
Bell Labs Innovations

Copyright © 1998 Lucent Technologies
All Rights Reserved